

Mini-SAS HD Test Adapter

User Manual



WILDER
TECHNOLOGIES

It's all about integrity

Table of Contents

Introduction.....	3
Product Inspection	6
The Mini-SAS HD Test Adapter Care and Handling Precautions	7
General Test Adapter, Cable, and Connector.....	9
Handling and Storage	9
Visual Inspection.....	9
Cleaning	9
Making Connections	9
Electrostatic Discharge Information.....	10
User Model	11
Calibration	15
SOLT.....	16
1X-THRU	17
Mechanical and Environmental Specifications.....	18
Electrical Specifications	23
Wilder Technologies, LLC – Limited Warranty	38
Wilder Technologies, LLC – Terms & Conditions of Sale	39
Compliance with Environmental Legislation	40
WEEE Compliance Statement.....	40
Glossary of Terms	41
Index	42

Introduction

This user's guide documents, the left handed and right handed, Mini-SAS HD Plug Adapters, as well as the Receptacle Test Adapter (MSASHD-TPAR-P, MSASHD-TPAL-P and MSASHD-TPA-R, respectively) and the associated Calibration Module (MSASHD-TPA-C). The left-hand and right-hand version Mini-SAS HD plug adapters are designed to test, side by side receptacles, that connect to the fixed side DUT. The three test adapter types, shown in Figures 1, 2 and 3, test Mini-SAS HD interface cables, hosts and devices against the SAS Specification and/or the functionality and timing of SFF-8636, and SFF-8649 (the TPAs do not contain the power supply filtering in section 5.6). The design meets the mechanical constraints of SFF-8644. The Calibration Module, shown on Page 15, is used to zero-out test adapter attributes (using SOLT, with either the 1X-THRU or the 2X-THRU).

The TPA-Ps and TPA-R test adapter assemblies allow easy access, via SMA connections, to measure or inject Data signals. The test adapters also provides access to Vman, Vact, IntL, ModPrsL, SDA, SCL, and GND, via an 8-position Molex connector.

NOTE: To avoid damaging the cables, use the handling techniques described in the Care and Handling section before making any connections or configuring a test setup.

Always use a static-safe workstation when performing tests, as explained in the "Electrostatic Discharge Information" section.

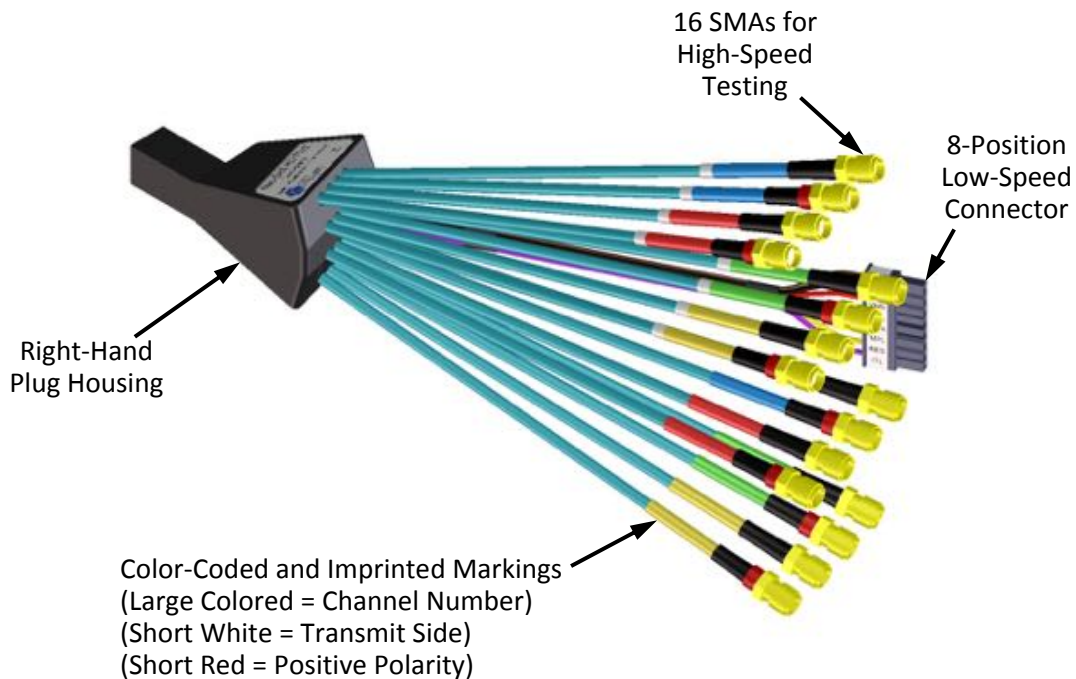


Figure 1. The Mini-SAS HD Test Adapter (Right-Hand Plug)

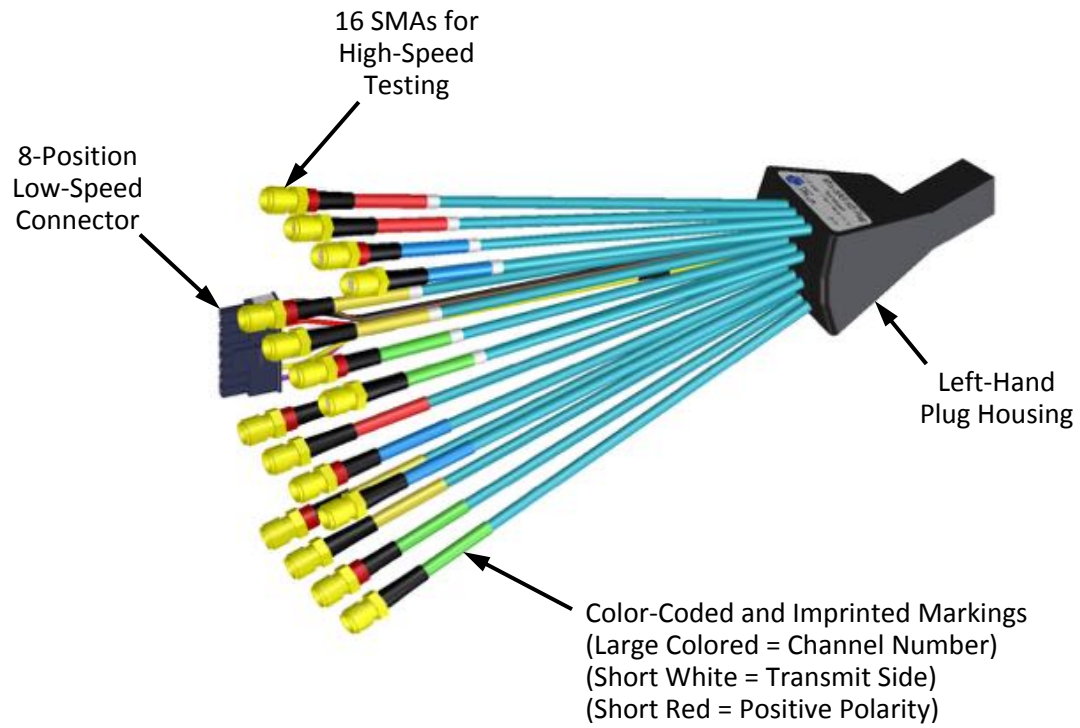


Figure 2. The Mini-SAS HD Test Adapter (Left-Hand Plug)

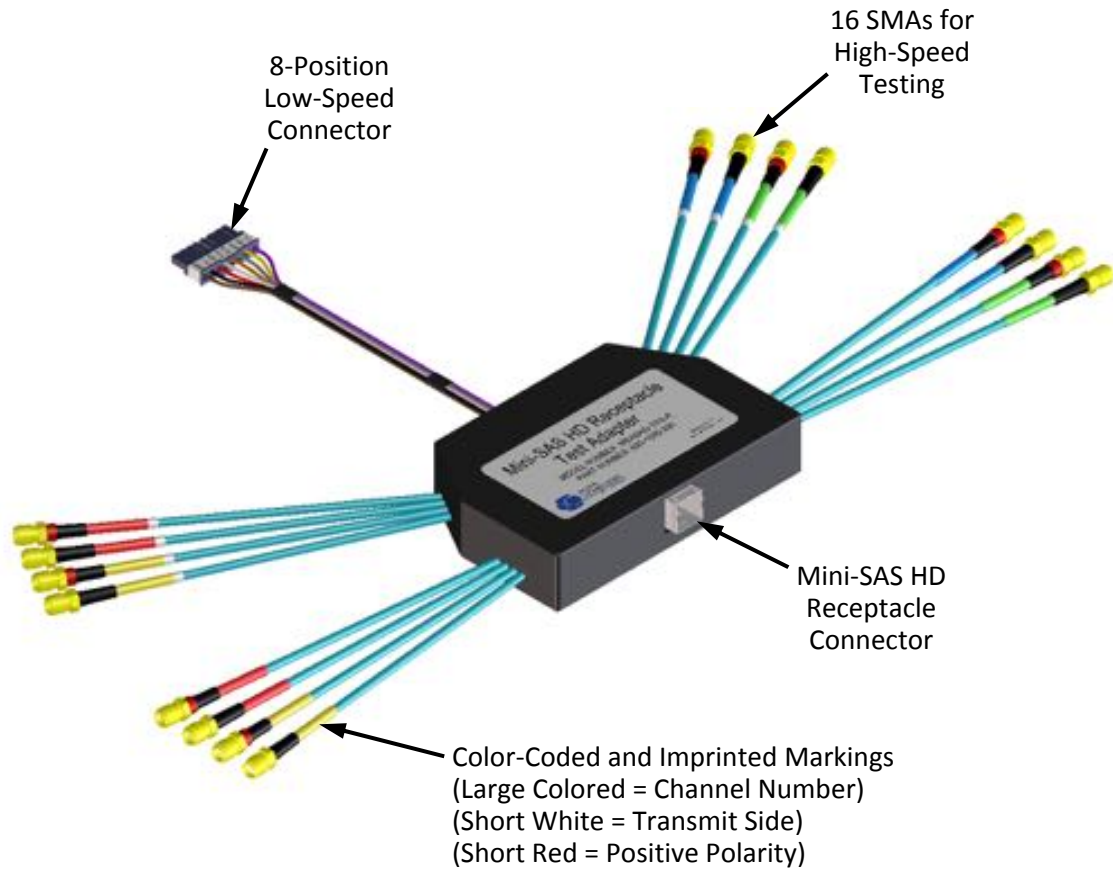


Figure 3. The Mini-SAS HD Test Adapter (Receptacle)

The low-speed 8-position receptacle connector is keyed and latching (Molex part number 43645-0800). The mating plug connector housing and contact pins for 26-30awg wire are provided with each MSASHD-TPA-R or MSASHD-TPA-P assembly (Molex part numbers 43640-0801 for the 8-position housing and 43031-0011 for the 26-30awg pin contact). Replacement plug parts can be purchased through Molex distributors.

Product Inspection

Upon receiving the MSASHD-TPA from Wilder Technologies, perform the following product inspection:

- Inspect the outer shipping container, foam-lined instrument case, and product for damage. Retain the outer cardboard shipping container until the contents of the shipment have been inspected for completeness and the product has been checked mechanically and electrically. Use the foam-lined instrument-case for secure storage of the Wilder Technologies Mini-SAS HD Test Adapter when not in use.
- Locate the shipping list and verify that all items ordered were received.
- In the unlikely event that the product is defective or incomplete, the “Limited Warranty” section discusses how to contact Wilder Technologies for technical assistance and/or how to package the product for return.

The Mini-SAS HD Test Adapter Care and Handling Precautions

The Mini-SAS HD Test Adapter requires careful handling to avoid damage. Improper handling techniques, or using too small a cable bend radius, can damage the coaxial cable connections within the adapter housing or the cables themselves. This can occur at any point along the cable. To achieve optimum performance and to prolong the MSASHD-TPA's life, observe the following handling precautions:

- **CAUTION 1: Avoid Torque Forces (Twisting)**
While individual coaxial cables within the test adapter have some rotational freedom, twisting the MSASHD-TPA as a unit, with one end held stationary, may damage or severely degrade performance. Adherence to Caution 5 (below) helps to avoid twisting.
- **CAUTION 2: Avoid Sharp Cable Bends**
Never bend coaxial cables into a radius of 26 mm (1-inch) or less. Never bend cables greater than 90°. Single or multiple cable bends must be kept within this limit. Bending the MSASHD-TPA cables less than a 26mm (1-Inch) radius will permanently damage or severely degrade test adapter performance.
- **CAUTION 3: Avoid Cable Tension (Pull Forces)**
Never apply tension (pull forces) to an individual coaxial cable that is greater than 2.3 kg (5 lbs.). To avoid applying tension, always place accessories and equipment on a surface that allows adjustment to eliminate tension on the MSASHD-TPA and cables. Use Disk Drive mounting brackets or rails, adjustable elevation stands or apparatus to accurately place and support the MSASHD-TPA.
- **CAUTION 4: Connect the Instrument Cables First**
To prevent twisting, bending, or applying tension to the MSASHD-TPA and its coaxial cables when connecting to the device under test (DUT) or cable under test, attach the test instrument cables to the test adapter before attaching to the DUT. Try to approximate the alignment and orientation of the test adapter to the DUT while attaching the SMA connectors of the test instrument cables.

If the MSASHD-TPA must be turned or twisted to make connection to the DUT, avoid using the MSASHD-TPA housing alone to make this occur. Try to distribute the torque forces along the length of the test setup and cabling. If this is not possible, it is recommended to first loosen or disconnect the SMA connections at the MSASHD-TPA, make the connection to the DUT and then re-tighten or attach the test equipment leads.

NOTE: Only grip the test adapter housing when inserting or extracting the MSASHD-TPA to or from the DUT. Pulling directly on the MSASHD-TPA cables or using them to insert the MSASHD-TPA may cause damage.

- **CAUTION 5: Carefully Make SMA Connections**

To connect the MSASHD-TPA SMA connectors, follow these steps:

1. Hold the cable stationary by grasping the cable at the black heat-shrink section near the SMA connector.
2. Insert the mating SMA barrel and hand-tighten the free-spinning SMA nut onto the connector while avoiding pulling, bending, or twisting the MSASHD-TPA coaxial cable.
3. The MSASHD-TPA SMA connectors have flats that accept an open-end 1/4-inch or 6.5mm wrench. When attaching instrument cables to the MSASHD-TPA, it is recommended that the MSASHD-TPA SMA connectors be mechanically held and the test leads be tightened to the equipment manufacturer's torque recommendations, normally 5 in-lbs, using a 5/16-inch open-end wrench.

If the test set-up requires repositioning, first loosen or disconnect the SMA connections to avoid twisting, bending, or tension.

NOTE: A drop in signal amplitude by half or 6db during the testing of a channel may indicate that a cable has been mechanically pulled free of coaxial cable connections internal to the assembly. This could be determined by checking if the cable has any lateral play relative to the TPA. This would only occur when the TPA has exceeded the pull force as specified within the mechanical specification. If the cable cannot be re-seated, the test adapter will need to be sent back to the factory for service.

- **CAUTION 6: Verify Orientation of Mini-SAS HD Plug Test Adapters**

As with all external Mini-SAS HD plug connectors, the Mini-SAS HD plug test adapters are keyed to ensure proper connection to the DUT. Verify the plug test adapter keying orientation before attempting to attach to the DUT.

NOTE: The plug test adapter will be permanently damaged if proper keying orientation is not maintained while attaching to the DUT. NEVER force attachment of the TPA to the DUT.

- **CAUTION 7: Independently Support Instrument Cables or Accessories**

Excessive weight from instrument cables and/or accessories connected to the MSASHD-TPA will cause damage or affect the test adapter performance. Be sure to provide appropriate means to support and stabilize all test set-up components.

General Test Adapter, Cable, and Connector

Observing simple precautions can ensure accurate and reliable measurements.

Handling and Storage

Before each use of the MSASHD-TPA, ensure that all connectors are clean. Handle all cables carefully and store the MSASHD-TPA in the foam-lined instrument case when not in use, if possible. Do not set connectors contact end down. Install the SMA protective end caps when the MSASHD-TPA is not in use.

Visual Inspection

Be sure to inspect all cables carefully before making a connection. Inspect all cables for metal particles, scratches, deformed threads, dents, or bent, broken, or misaligned center conductors. Do not use damaged cables.

Cleaning

If necessary, clean the connectors using low-pressure (less than 60 PSI) compressed air or nitrogen with an effective oil-vapor filter and condensation trap. Clean the cable threads, if necessary, using a lint-free swab or cleaning cloth moistened with isopropyl alcohol. Always completely dry a connector before use. Do not use abrasives to clean the connectors. Re-inspect connectors, making sure no particles or residue remains.

Making Connections

Before making any connections, review the “Care and Handling Precautions” section. Follow these guidelines when making connections:

- Align cables carefully
- Make preliminary connection lightly
- To tighten, turn connector nut only
- Do not apply bending force to cable
- Do not over-tighten preliminary connections
- Do not twist or screw-in cables
- Use an appropriately sized torque wrench, and do not tighten past the “break” point of the torque wrench
- Verify orientation of the keyed plug TPA prior to attachment to DUT.

Electrostatic Discharge Information

Protection against electrostatic discharge (ESD) is essential while connecting, inspecting, or cleaning the MSASHD-TPA test adapter and connectors attached to a static-sensitive circuit (such as those found in test sets)

Electrostatic discharge can damage or destroy electronic components. Be sure to perform all work on electronic assemblies at a static-safe work station, using two types of ESD protection:

- Conductive table-mat and wrist-strap combination
- Conductive floor-mat and heel-strap combination

When used together, both of these types provide a significant level of ESD protection. Used alone, the table-mat and wrist-strap combination provide adequate ESD protection. To ensure user safety, the static-safe accessories must provide at least 1 MΩ of isolation from ground. Acceptable ESD accessories may be purchased from a local supplier.


WARNING: These techniques for a static-safe work station should not be used when working on circuitry with a voltage potential greater than 500 volts.

User Model


The MSASHD TPA supports all testing of the SAS Specification 3.0 and SFF-8636. It is capable of performing well beyond the scope of measurements required, limited only by the specifications, environmental, care and handling as stated in this document.

The following examples are suggestions for possible testing setups.


This first example shows the general case for a Mini-SAS HD Plug TPA is used to test a Mini-SAS HD fixed-side device:

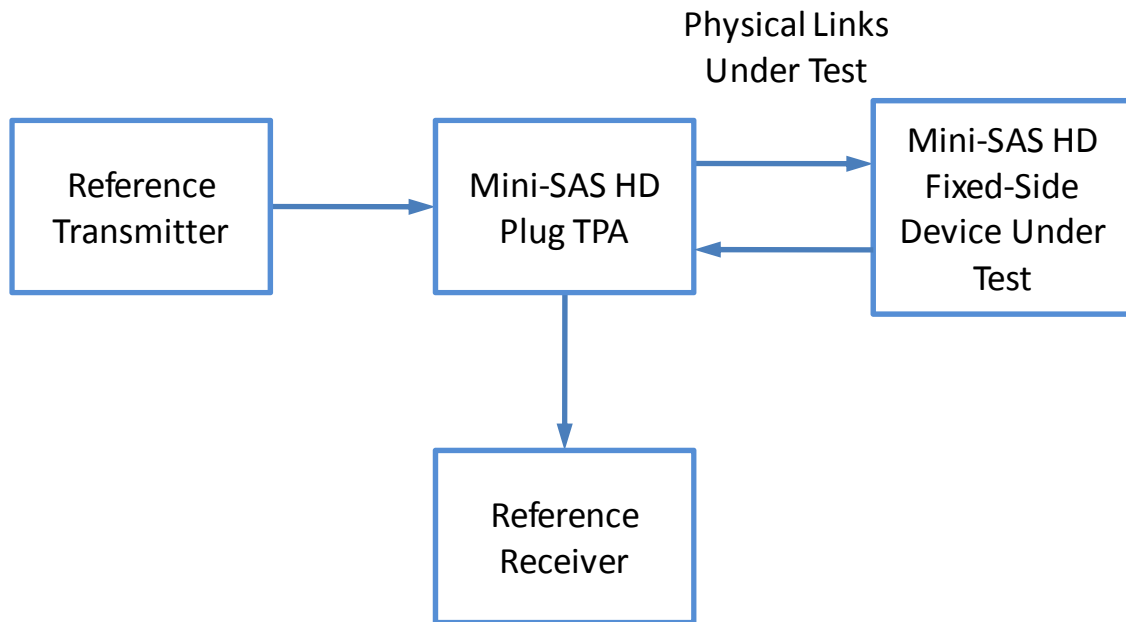


The second example shows the general case for the Mini-SAS HD receptacle TPA testing a Mini-SAS HD free-side device:

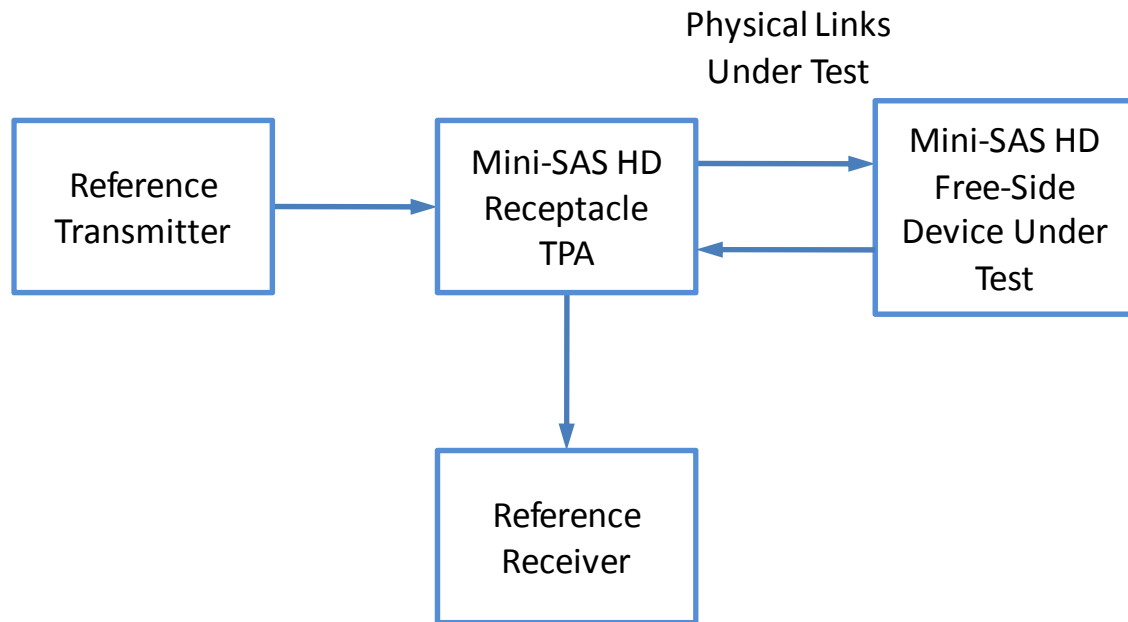

The third example shows a Mini-SAS HD Receptacle TPA and a Mini-SAS HD cable assembly used to test a fixed-side device:

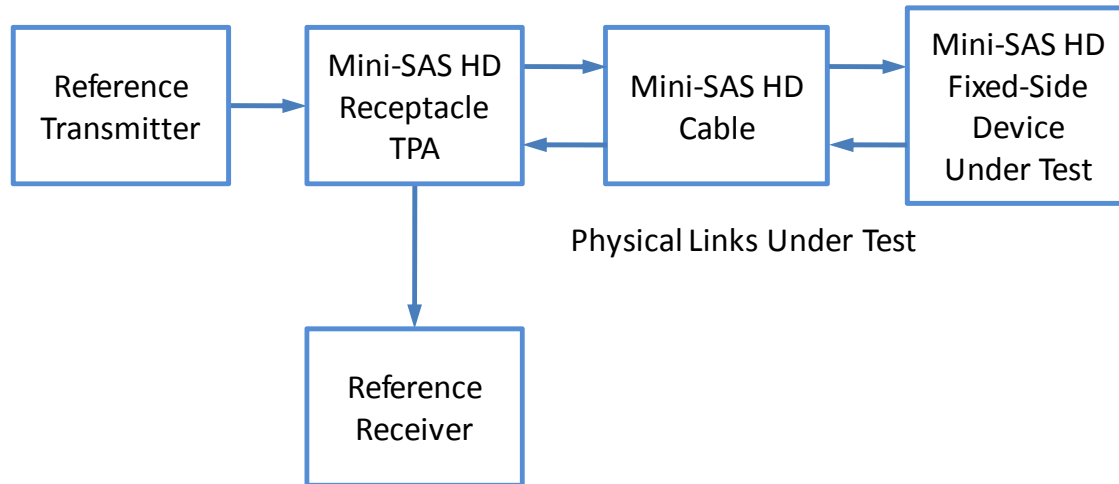

The fourth example shows two Mini-SAS HD Receptacle TPAs used for testing a Mini-SAS HD cable:

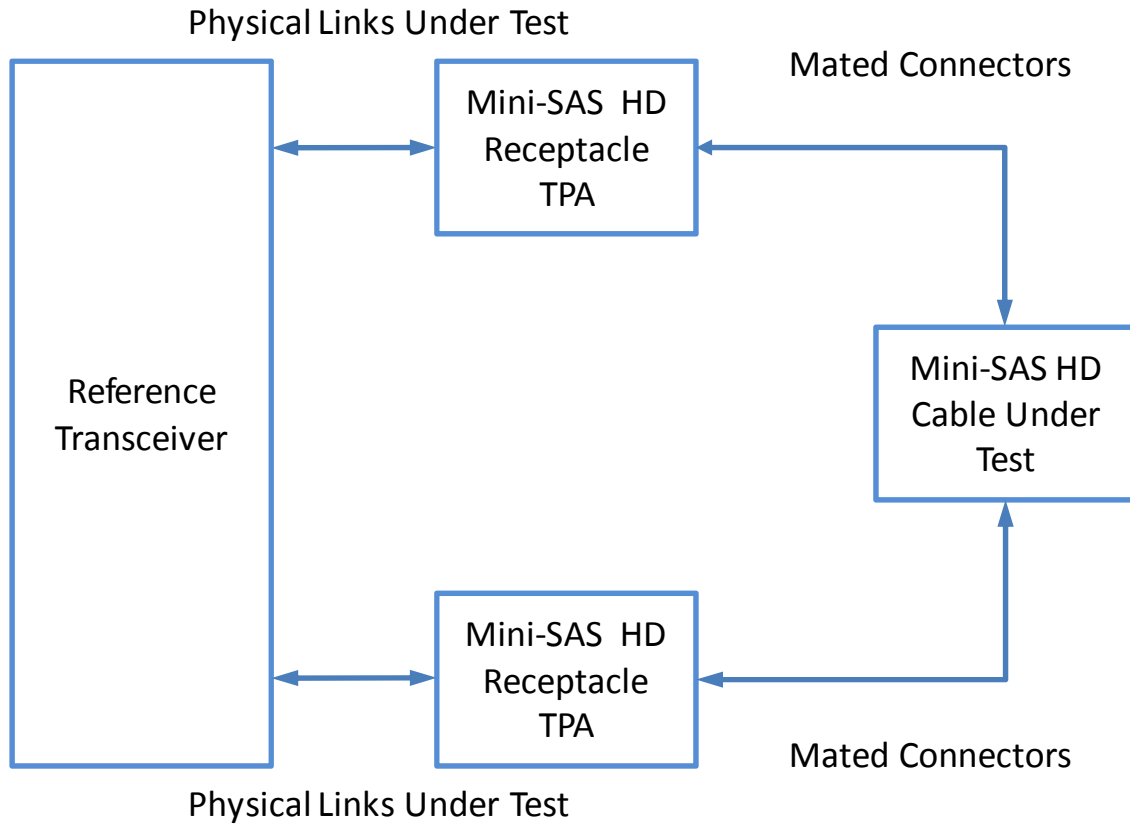

Calibration

The Mini-SAS HD Plug and Receptacle Test Adapters are passive components. Therefore, calibration for the errors generated must occur within the test instrumentation that drives the SAS target device or looks at the response of the SAS initiator device.



Figure 4. Calibration module (MSASHD-TPA-C) showing standard 6-inch cable on SOLT and 3-inch cables connected to the 1X-THRU

SOLT

SHORT, OPEN, LOAD, and 2X-THRU (SOLT) are calibration standards used to compensate for errors associated with the TPA when used for Jitter measurement, TDR, TDT, and VNA testing. SOLT represents the same electrical length and losses as the TPA through the Mini-SAS HD connector pad, and enables the test engineer to compensate for the following six repeatable, systematic errors that occur when moving the reference plane:

- Signal leakage effects: *Directivity Errors*
- Signal leakage effects: *Crosstalk Errors*
- Reflection effects: *Source Impedance Mismatching Errors*
- Reflection effects: *Load Impedance Mismatching Errors*
- Bandwidth effects: *Receiver Transmission in Test Equipment Errors*
- Bandwidth effects: *Receiver Reflection-tracking in Test Equipment Errors*

These errors need to be corrected on each port. Refer to the Instrument Manual for instructions on the instrument's specific calibration process.

NOTE: The reference plane is the boundary, both physically and electrically, between the calibrated and uncalibrated portions of the circuit. Everything outside the reference plane is considered part of the DUT. Any instrument that does not use calibration defines the DUT as the total of externally connected components. If the MSASHD-TPA-C is not used, all of the MSASHD-TPA and the 6-inch cables, as well as cables connecting the 6-inch cables to the test instrument, would be a part of the DUT.

Non-repeatable errors, such as drift or random errors, can be reduced but not corrected. Drift errors aggregate over time or with environmental changes such as temperature shift. To eliminate drift errors, perform another calibration.

A random error cannot be corrected through calibration since the error occurred randomly. Random errors are typically associated with either test instrument noise or test repeatability problems. Reduce test instrument noise by increasing source power, lowering the IF bandwidth, or averaging results over multiple sweeps. Reduce test repeatability problems through the use of a torque wrench or, again, by averaging over multiple sweeps.

1X-THRU

The 1X-THRU is a calibration feature used to calibrate time domain instrumentation (for example, pre-emphasized pulse generators or AWGs, arbitrary waveform generators). 1X-THRU calibration compensates two error sources – cable losses and group delay:

- **Cable Losses** – Cable losses associated with the Mini-SAS HD receptacle TPA, and its respective cabling that's connected to the test source, consist of skin loss and, to a lesser extent, dielectric loss. Pre-emphasis or de-emphasis is used at the signal source to correct for these cable losses. Pre-emphasis is a boost of the signal level just after an edge transition; de-emphasis is a reduction in the low-speed amplitude of the signal source. Typically, on a de-emphasized signal the levels have to be reset to attain the same output levels. Resultant signals from either pre-emphasis or de-emphasis are identical relative to the DUT.

For the purposes of this discussion, pre-emphasis will be used. To set the pre-emphasis, first determine the amount of signal boost by connecting the signal source, via the 1X-THRU and the respective cable used to connect the DUT to the source to a high-speed oscilloscope or a jitter measurement device. Trigger the oscilloscope or jitter measurement device using a trigger from the source. The trigger, a single event, indicates the start of the signal being sent to the DUT. Adjust pre-emphasis to maximize the eye opening.

- **Group Delay** – Group delay is the second error source for 1X-THRU calibration. When the DUT generates an output signal, it can be used to measure delay. To create a baseline delay measurement, connect the output signal cable to the input signal cable and the 1X-THRU. To determine corrected DUT delay, subtract this baseline measurement from the DUT delay measurements.

Mechanical and Environmental Specifications

NOTE: All specifications in this manual are subject to change.

Table 1. General Specifications

ITEM	DESCRIPTION
Usage Environment	Controlled indoor environment
Plug Test Adapter Length (w/standard cables)	184.4 mm +/- 2 mm (7.26 inches +/- .08 inches) (Characteristic)
Receptacle Test Adapter Length (w/std. cables)	371.9 mm +/- 2 mm (14.6 inches +/- .08 inches) (Characteristic)
Operating Temperature	0°C to +55°C (32°F to +131°F) (Characteristic)
Storage Temperature	-40°C to +70°C (-40°F to +158°F) (Characteristic)

MSASHD-TPA-R Cable Pinout

The MSASHD-TPA-R cables provide sixteen SMA connectors (four lanes, consisting of four differential TX and RX channels), and one 8-position connector. Labels clearly mark each cable or connector. The following figure refers to pin-description tables for each of the three connector types.

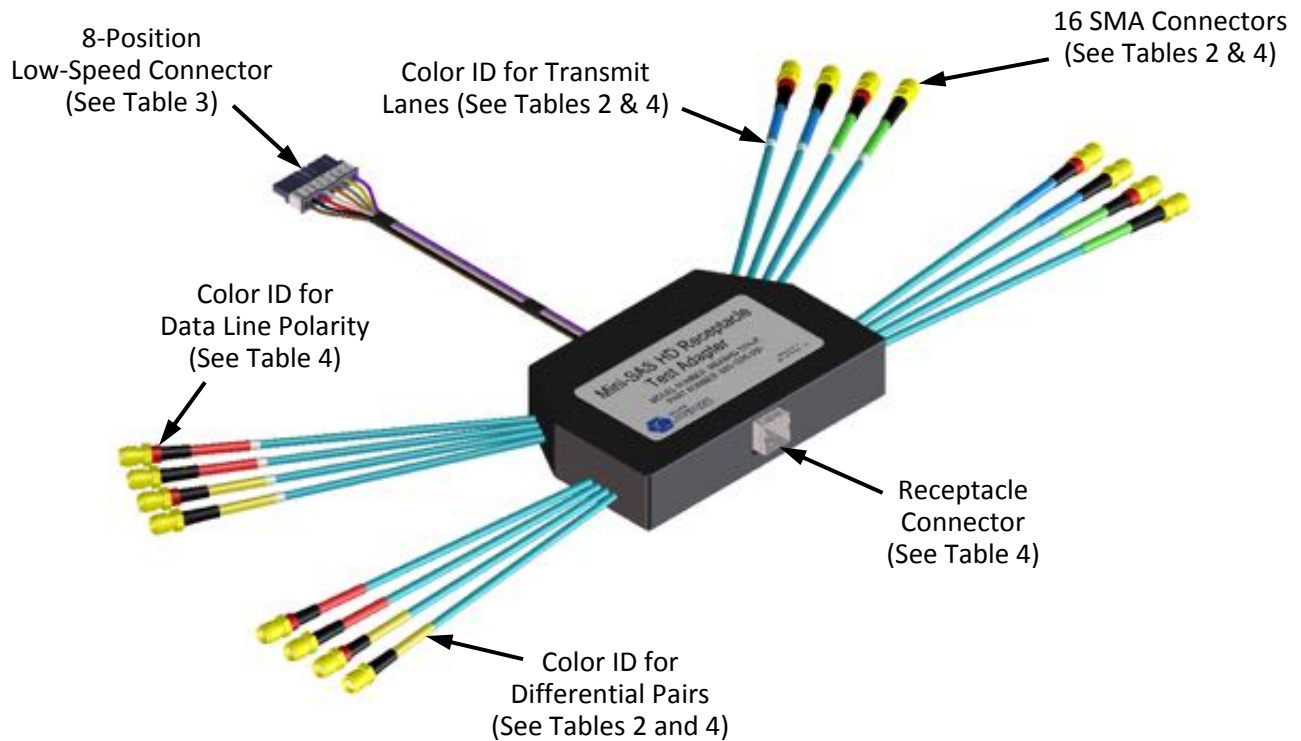


Figure 5. Cable Connectors (MSASHD-TPA-R shown)

MSASHD-TPA-P Cable Pinout

The MSASHD-TPA-P cables (right or left-hand models) provide sixteen SMA connectors (four lanes, consisting of four differential TX and RX channels), and one 8-position connector. Labels clearly mark each cable or connector. The following figure refers to the pin-description tables for each of the connector types.

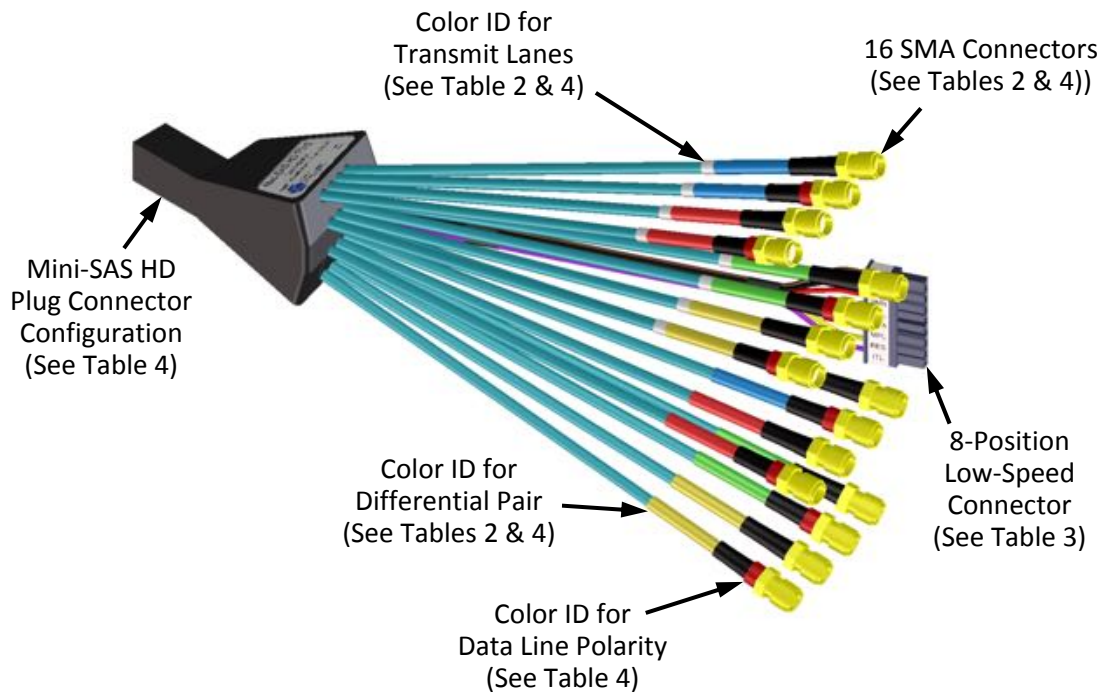


Figure 6. Cable Connectors (Mini-SAS HD Right-Hand Plug shown)

Table 2. SMA Cable Connectors (High-Speed)

LABEL	COLOR ID FOR DIFFERENTIAL PAIR	DESCRIPTION
RX3+	Green	Lane 3 Receiver positive
RX3-	Green	Lane 3 Receiver negative
RX2+	Blue	Lane 2 Receiver positive
RX2-	Blue	Lane 2 Receiver negative
RX1+	Yellow	Lane 1 Receiver positive
RX1-	Yellow	Lane 1 Receiver negative
RX0+	Red	Lane 0 Receiver positive
RX0-	Red	Lane 0 Receiver negative
TX3+	Green with White band	Lane 3 Transmitter positive
TX3-	Green with White band	Lane 3 Transmitter negative
TX2+	Blue with White band	Lane 2 Transmitter positive
TX2-	Blue with White band	Lane 2 Transmitter negative
TX1+	Yellow with White band	Lane 1 Transmitter positive
TX1-	Yellow with White band	Lane 1 Transmitter negative
TX0+	Red with White band	Lane 0 Transmitter positive
TX0-	Red with White band	Lane 0 Transmitter negative

Table 3. MSASHD-TPA 8-Position Low-Speed Connector

LABEL	PIN NO.	COLOR IDENTIFICATION	DESCRIPTION
GND	Pin 1	Brown	rf Ground
VAC	Pin 2	Black	Vact, active cable power
VMN	Pin 3	Red	Vman, management interface power
SCL	Pin 4	White	SCL, two wire interface clock
SDA	Pin 5	Orange	SDA, two wire interface data
MPL	Pin 6	Gray	ModPrsL, active low module present
RES	Pin 7	Yellow	Reserved
ITL	Pin 8	Violet	IntL, active low module interrupt

Mini-SAS HD Test Adapter User Manual

Table 4. Mini-SAS HD Plug and Receptacle Pin Assignments

Pin Description	Vact	Vman	Ground	Lane 0 Transmit Positive	Lane 0 Transmit Negative	Ground	Lane 2 Transmit Positive	Lane 2 Transmit Negative	Ground
Connector Pin Number	D1	D2	D3	D4	D5	D6	D7	D8	D9
Destination Nomenclature	VAC	VMN	GND	TX0+	TX0-	GND	TX2+	TX2-	GND
Color ID for Data Line Polarity	N/A	N/A	N/A	Red	Black	N/A	Red	Black	N/A
Color Identification	Black Wire	Red Wire	Brown Wire	Red Label with White band	Red Label with White band	Brown Wire	Blue Label with White band	Blue Label with White band	Brown Wire

D row

C row



Pin Description	SCL*	SDA*	Ground	Lane 1 Transmit Positive	Lane 1 Transmit Negative	Ground	Lane 3 Transmit Positive	Lane 3 Transmit Negative	Ground
Connector Pin Number	C1	C2	C3	C4	C5	C6	C7	C8	C9
Destination Nomenclature	SCL	SDA	GND	TX1+	TX1-	GND	TX3+	TX3-	GND
Color ID for Data Line Polarity	N/A	N/A	N/A	Red	Black	N/A	Red	Black	N/A
Color Identification	White Wire	Orange Wire	Brown Wire	Yellow Label with White band	Yellow Label with White band	Brown Wire	Green Label with White band	Green Label with White band	Brown Wire

* 4.7K Ohms to Vman for Mini-SAS HD Receptacle Only.

Mini-SAS HD Test Adapter User Manual

Table 4 (cont.) Mini-SAS HD Plug and Receptacle Pin Assignments

Pin Description	Vact	ModPrsL	Ground	Lane 0 Receiver Positive	Lane 0 Receiver Negative	Ground	Lane 2 Receiver Positive	Lane 2 Receiver Negative	Ground
Connector Pin Number	B1	B2	B3	B4	B5	B6	B7	B8	B9
Destination Nomenclature	VAC	MPL*	GND	RX0+	RX0-	GND	RX2+	RX2-	GND
Color ID for Data Line Polarity	N/A	N/A	N/A	Red	Black	N/A	Red	Black	N/A
Color Identification	Black Wire	Gray Wire	Brown Wire	Red Label	Red Label	Brown Wire	Blue Label	Blue Label	Brown Wire

B row
A row



Pin Description	Reserved	Low active Interrupt	Ground	Lane 1 Receiver Positive	Lane 1 Receiver Negative	Ground	Lane 3 Receiver Positive	Lane 3 Receiver Negative	Ground
Connector Pin Number	A1	A2	A3	A4	A5	A6	A7	A8	A9
Destination Nomenclature	RES	ITL*	GND	RX1+	RX1-	GND	RX3+	RX3-	GND
Color ID for Data Line Polarity	N/A	N/A	N/A	Red	Black	N/A	Red	Black	N/A
Color Identification	Yellow Wire	Violet Wire	Brown Wire	Yellow Label	Yellow Label	Brown Wire	Green Label	Green Label	Brown Wire

* 4.7K Ohms to Vman for Mini-SAS HD Receptacle Only.

Electrical Specifications

NOTE: All specifications in this manual are subject to change.

Table 5. Electrical Specifications

SPECIFICATION	MINIMUM	TYPICAL	MAXIMUM	NOTES
Insertion Loss (GHz), at -3 db	12	14.5		2X-THRU with six-inch cables
Return Loss (GHz), at -20 db	7	18		2X-THRU with six-inch cables
Insertion Loss (GHz), at -3 db		24.7		1X-THRU with three-inch cables
Return Loss (GHz), at -20 db		14.8		1X-THRU with three-inch cables
VSWR, at 12 GHz	1.21:1			2X-THRU with six-inch cables
Differential Impedance (ohms), 70 ps Rise Time 20 – 80 percent	95		105	All Differential Pairs, Receptacle and Plug, excluding Mini-SAS HD connector.
Differential Impedance (ohms), 70 ps Rise Time, 20 – 80 percent	90		110	All Differential Pairs, Receptacle and Plug, including Mini-SAS HD connector.
Impedance (ohms), 70ps Rise Time, 20 – 80 percent	47.5		52.5	All Differential Pairs, Receptacle and Plug, excluding Mini-SAS HD connector.
Impedance (ohms), 70 ps Rise Time, 20 – 80 percent	47.5		52.5	SHORT, OPEN, LOAD, 1X-THRU, and 2X-THRU
Intra-pair Skew (ps)	-6		6	All Differential Pairs, Receptacle and Plug
Inter-pair Skew (ps)	-6		6	All Differential Pairs, Receptacle and Plug
NEXT (db), at 3.0 GHz, at 6.0 GHz	-35	-39 -33		All differential pairs, single aggressor, without SAS connector, with six-inch cables and terminations
Current Carrying (A)	0.3			Vact, Vman

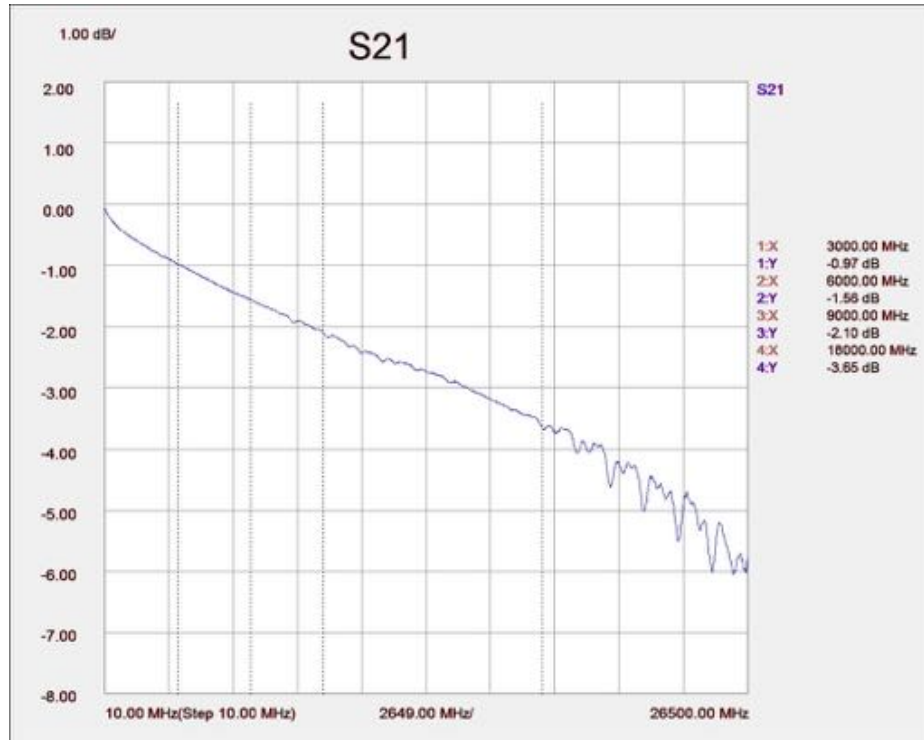


Figure 7. Typical 2X-THRU insertion loss

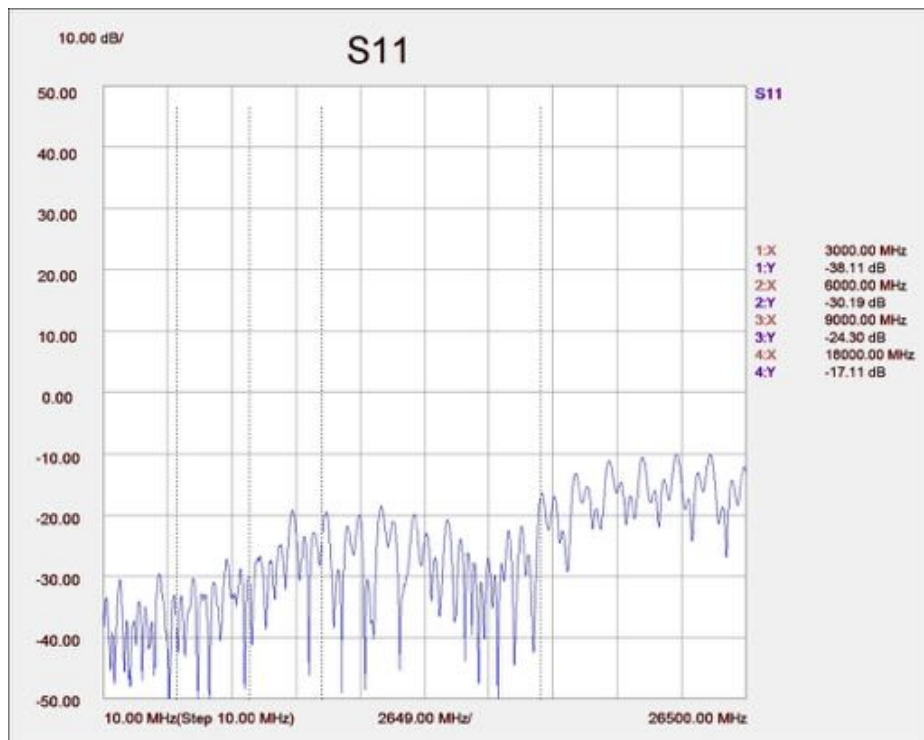


Figure 8. Typical 2X-THRU return loss



Figure 9. Typical 1X-THRU insertion loss

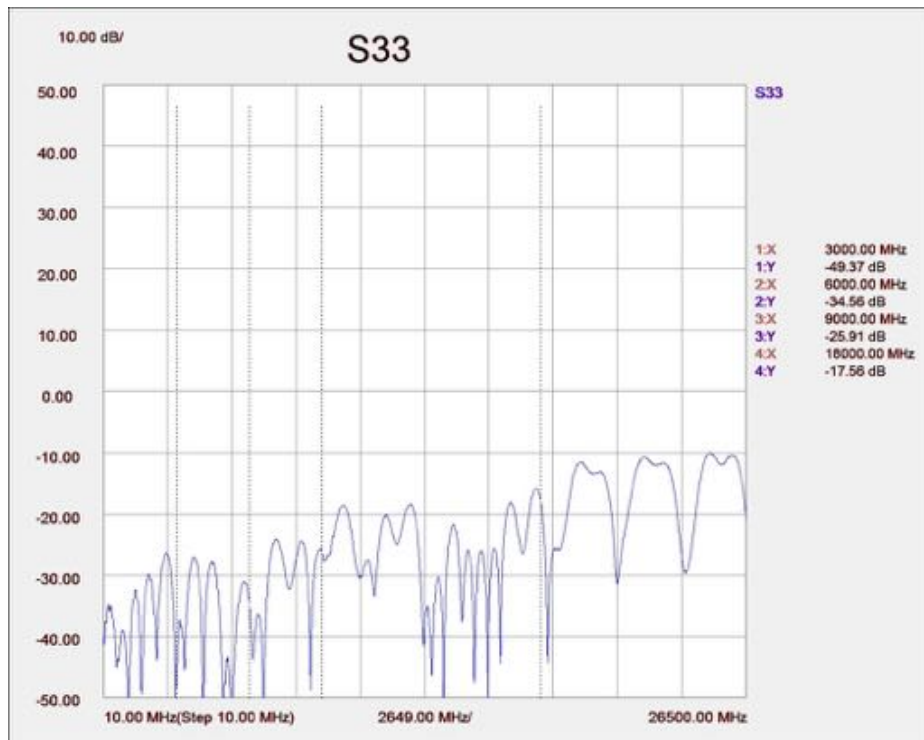


Figure 10. Typical 1X-THRU return loss


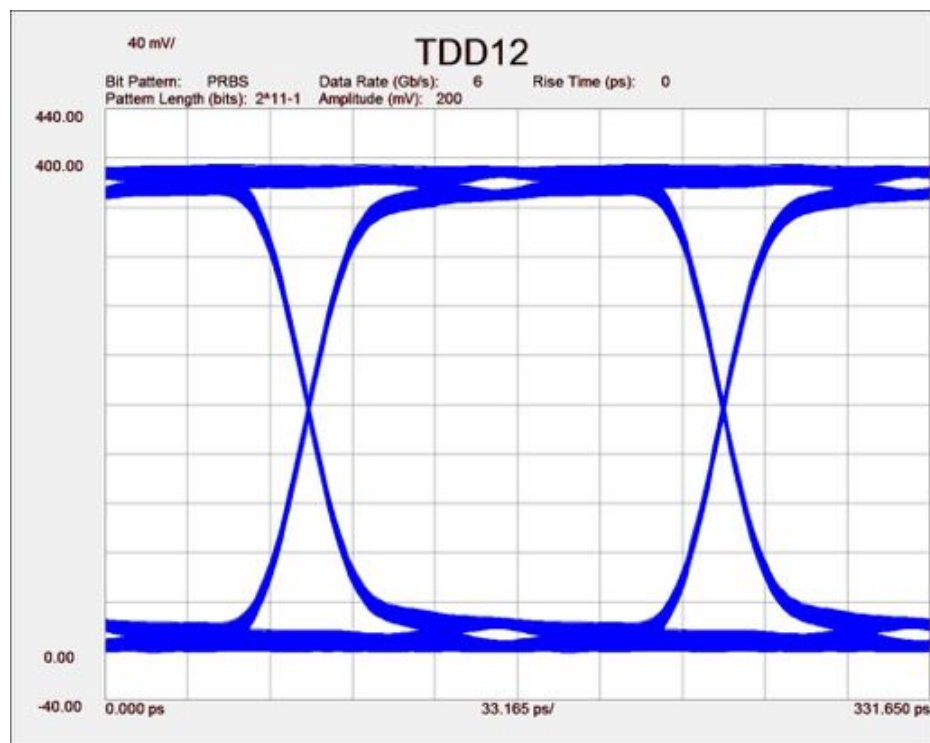


Figure 11. Typical mated pair 6 Gb/s eye diagram, with calibration (top) and without calibration (bottom)

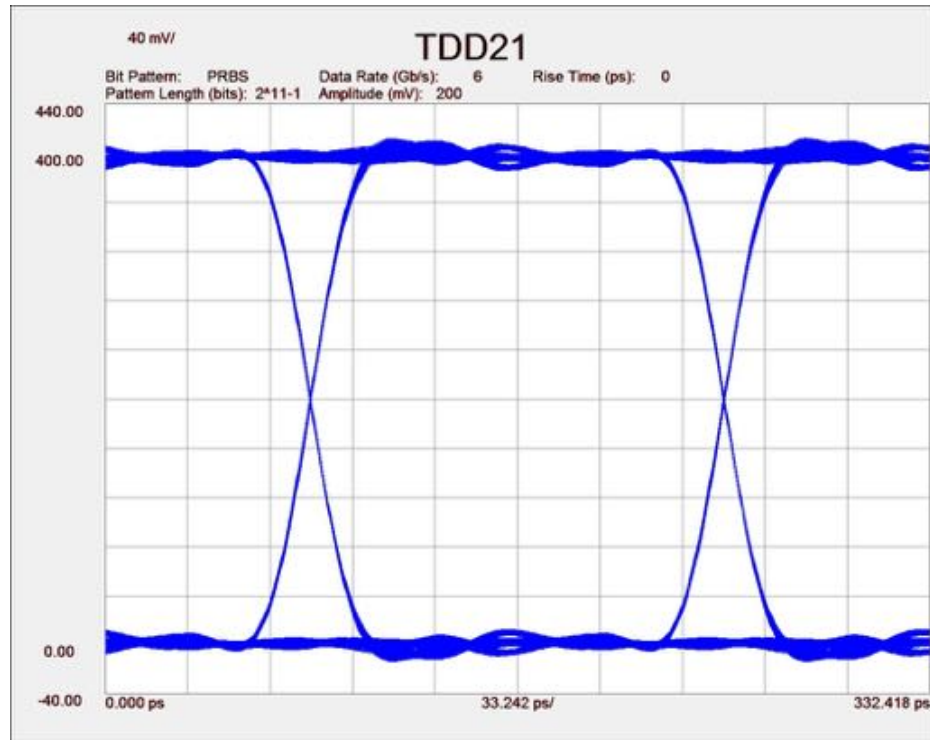

Parameter Measurement Result

Name	Measurement Result
Eye Level Zero(mV)	1.54
Eye Level One(mV)	396.76
Eye Level Mean(mV)	199.15
Eye Amplitude(mV)	395.22
Eye Height(mV)	375.33
Eye Height(db)	-4.36
Eye Width	1.66e-010
Eye Opening Factor	0.95
Eye Signal_to_Noise	52.18
Eye Duty Cycle Dist	-6.14e-015
Eye Duty Cycle Dist(%)	-0.00
Eye Rise Time (20-80)	2.06e-011
Eye Fall Time (80-20)	2.06e-011
Eye Jitter(PP)	1.13e-012
Eye Jitter(RMS)	2.63e-013

S Param DUT Files Meas



Parameter Measurement Result

Name	Measurement Result
Eye Level Zero(mV)	12.63
Eye Level One(mV)	380.22
Eye Level Mean(mV)	196.42
Eye Amplitude(mV)	367.59
Eye Height(mV)	336.45
Eye Height(db)	-4.73
Eye Width	1.63e-010
Eye Opening Factor	0.92
Eye Signal_to_Noise	22.75
Eye Duty Cycle Dist	-1.05e-014
Eye Duty Cycle Dist(%)	-0.01
Eye Rise Time (20-80)	2.53e-011
Eye Fall Time (80-20)	2.53e-011
Eye Jitter(PP)	3.33e-012
Eye Jitter(RMS)	5.34e-013

S Param DUT Files Meas

Figure 12. Typical mated pair 6 Gb/s eye data, with calibration (top) and without calibration (bottom)


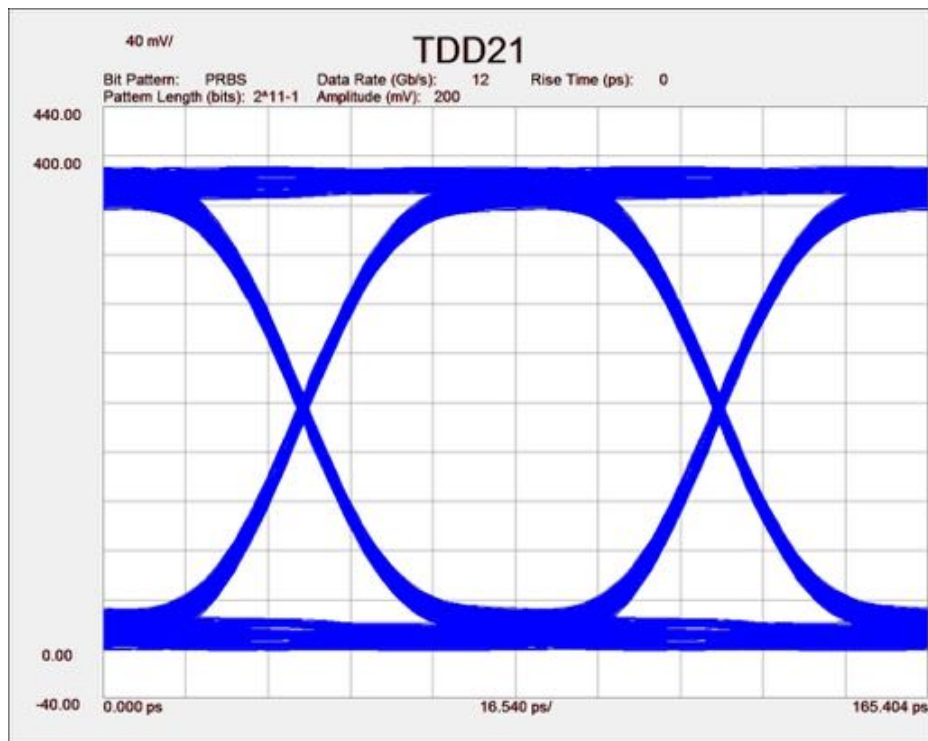


Figure 13. Typical mated pair 12 Gb/s eye diagram, with calibration (top) and without calibration (bottom)

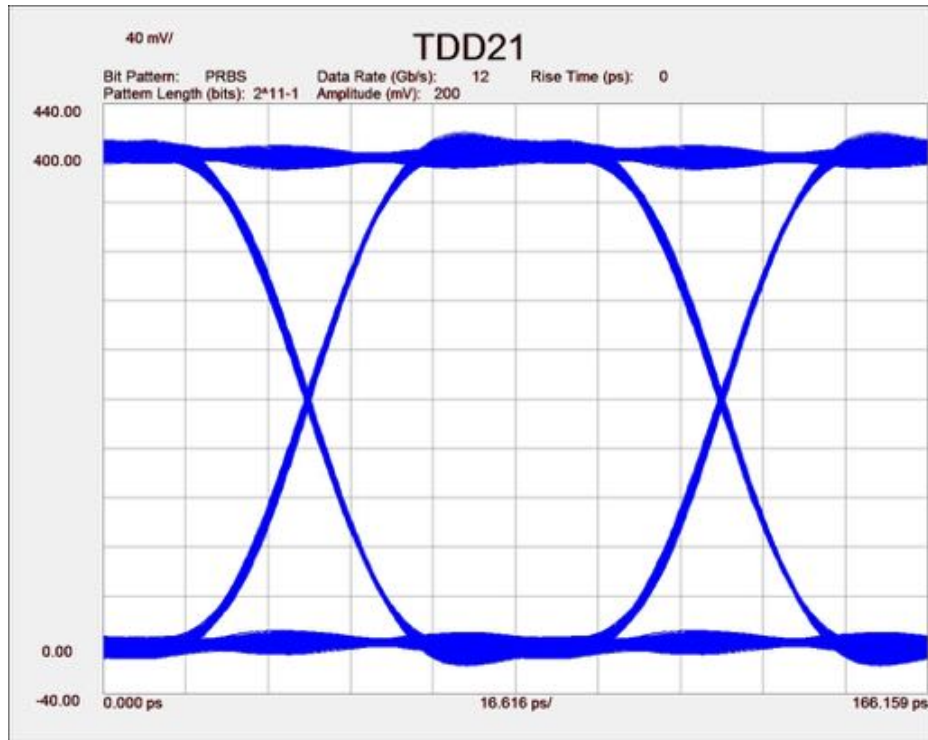

Parameter Measurement Result

Name	Measurement Result
Eye Level Zero(mV)	-2.00
Eye Level One(mV)	400.32
Eye Level Mean(mV)	199.16
Eye Amplitude(mV)	402.33
Eye Height(mV)	381.31
Eye Height(db)	-4.19
Eye Width	8.13e-011
Eye Opening Factor	0.95
Eye Signal_to_Noise	40.99
Eye Duty Cycle Dist	6.27e-015
Eye Duty Cycle Dist(%)	0.01
Eye Rise Time (20-80)	2.13e-011
Eye Fall Time (80-20)	2.13e-011
Eye Jitter(PP)	2.03e-012
Eye Jitter(RMS)	4.36e-013

Param
 DUT
 Files
 Meas



Parameter Measurement Result

Name	Measurement Result
Eye Level Zero(mV)	17.59
Eye Level One(mV)	373.03
Eye Level Mean(mV)	195.31
Eye Amplitude(mV)	355.45
Eye Height(mV)	317.01
Eye Height(db)	-4.99
Eye Width	8.02e-011
Eye Opening Factor	0.89
Eye Signal_to_Noise	19.36
Eye Duty Cycle Dist	-5.92e-014
Eye Duty Cycle Dist(%)	-0.07
Eye Rise Time (20-80)	2.43e-011
Eye Fall Time (80-20)	2.43e-011
Eye Jitter(PP)	3.14e-012
Eye Jitter(RMS)	7.51e-013

Param
 DUT
 Files
 Meas

Figure 14. Typical mated pair 12 Gb/s eye data, with calibration (top) and without calibration (bottom)

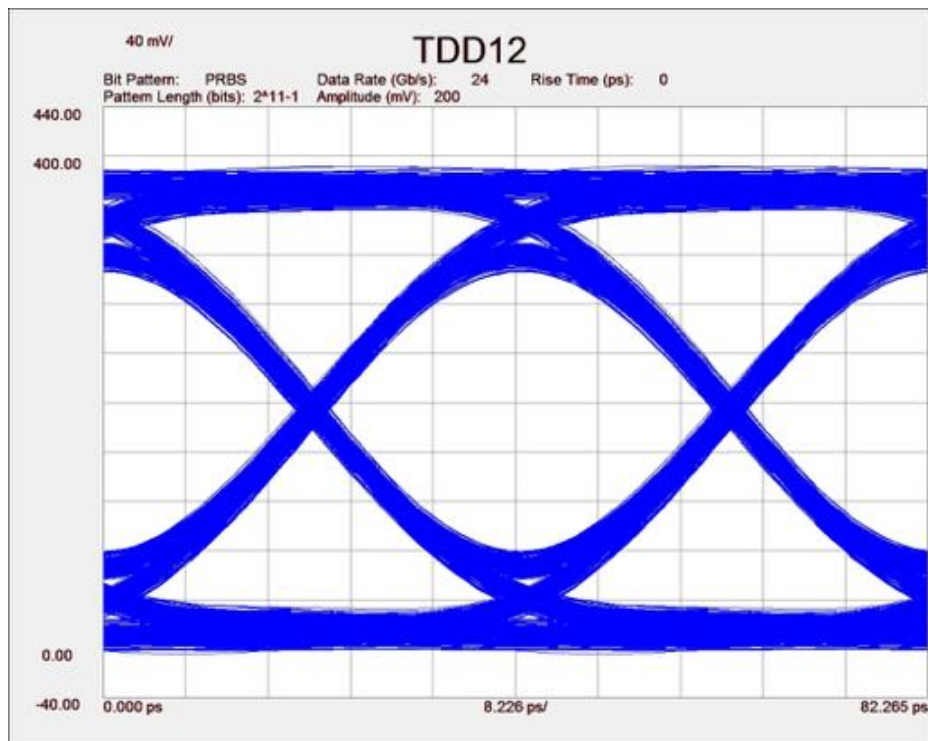
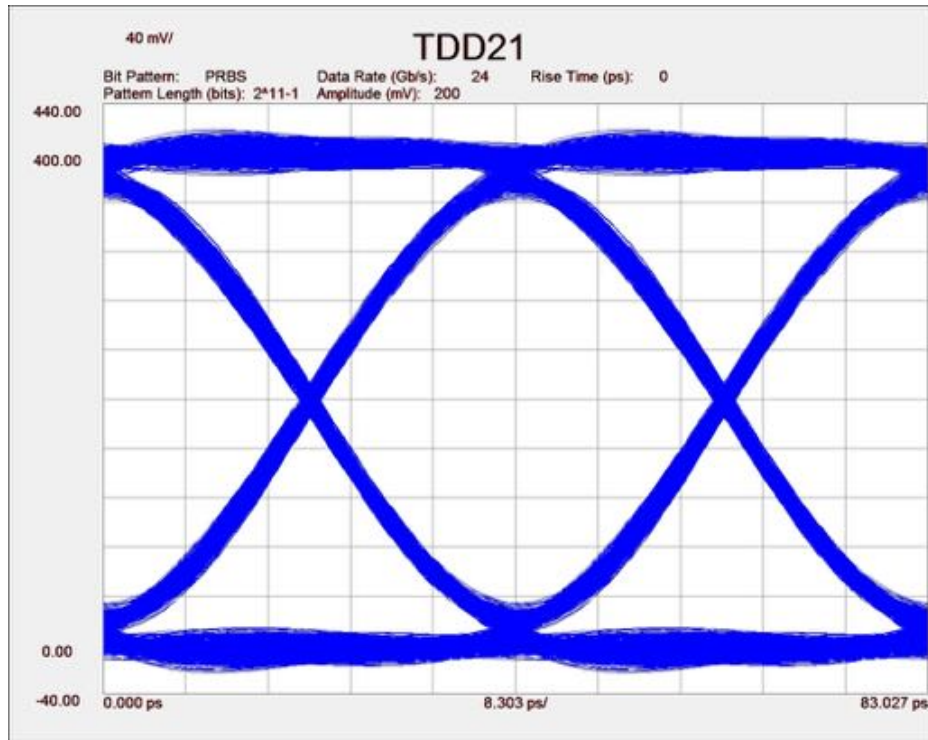


Figure 15. Typical mated pair 24 Gb/s eye diagram, with calibration (top) and without calibration (bottom)

Parameter Measurement Result	
Name	Measurement Result
Eye Level Zero(mV)	16.74
Eye Level One(mV)	380.56
Eye Level Mean(mV)	198.65
Eye Amplitude(mV)	363.83
Eye Height(mV)	281.12
Eye Height(db)	-5.51
Eye Width	3.90e-011
Eye Opening Factor	0.77
Eye Signal_to_Noise	9.67
Eye Duty Cycle Dist	-2.09e-012
Eye Duty Cycle Dist(%)	-5.01
Eye Rise Time (20-80)	1.85e-011
Eye Fall Time (80-20)	1.79e-011
Eye Jitter(pp)	2.68e-012
Eye Jitter(RMS)	5.54e-013

S. Param DUT Files Meas

Parameter Measurement Result	
Name	Measurement Result
Eye Level Zero(mV)	43.97
Eye Level One(mV)	344.23
Eye Level Mean(mV)	194.10
Eye Amplitude(mV)	300.26
Eye Height(mV)	204.86
Eye Height(db)	-6.89
Eye Width	3.75e-011
Eye Opening Factor	0.68
Eye Signal_to_Noise	5.65
Eye Duty Cycle Dist	-2.54e-012
Eye Duty Cycle Dist(%)	-6.09
Eye Rise Time (20-80)	2.06e-011
Eye Fall Time (80-20)	2.02e-011
Eye Jitter(pp)	4.16e-012
Eye Jitter(RMS)	8.57e-013

S. Param DUT Files Meas

Figure 16. Typical mated pair 24 Gb/s eye data, with calibration (top) and without calibration (bottom)

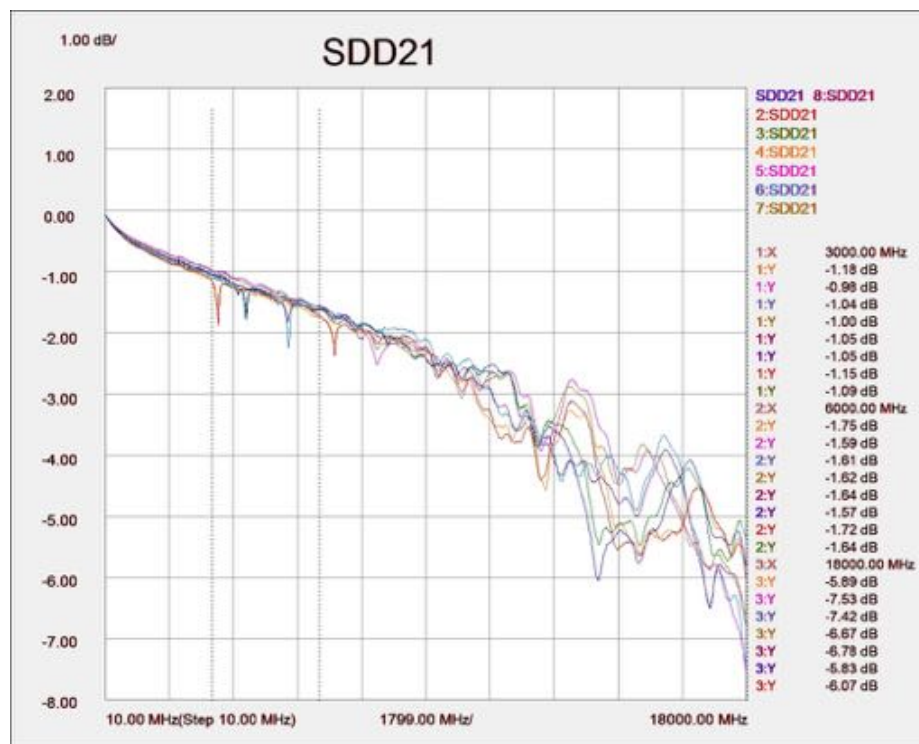


Figure 17. Typical mated pair balanced insertion loss, with calibration (top) and without calibration (bottom)

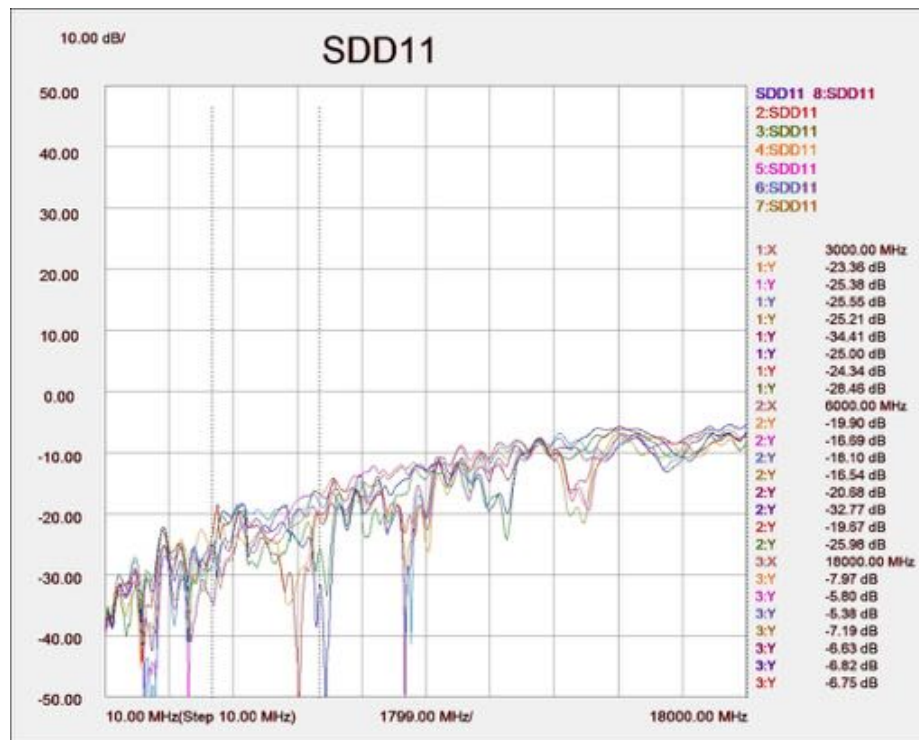
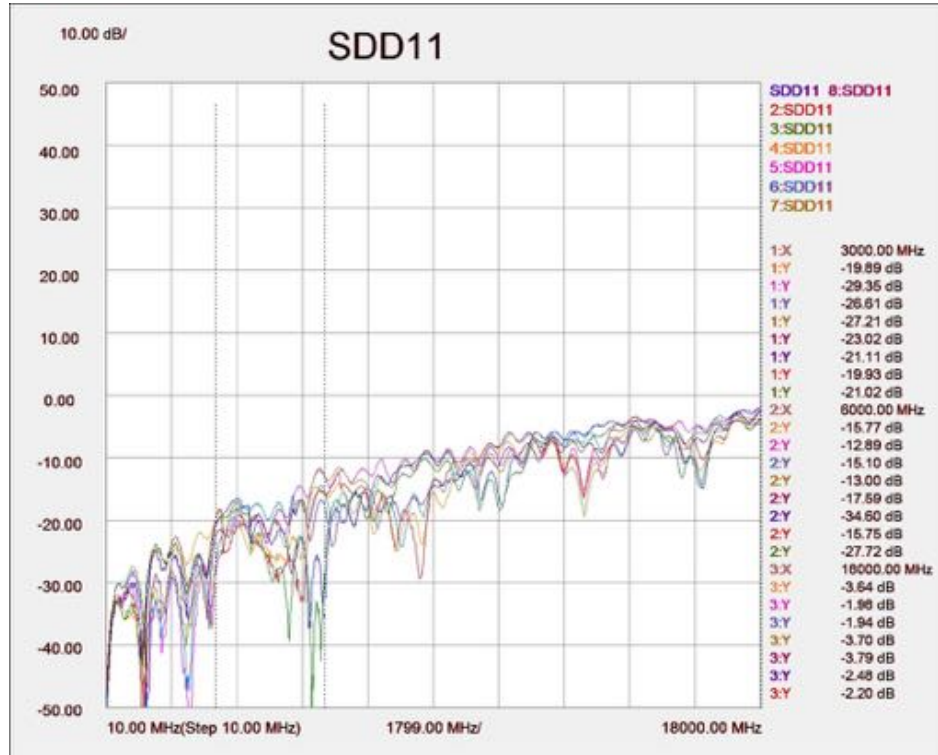


Figure 18. Typical mated pair balanced return loss, with calibration (top) and without calibration (bottom)



Figure 19. Typical plug TPA balanced return loss, differential termination replacing Mini-SAS HD connector

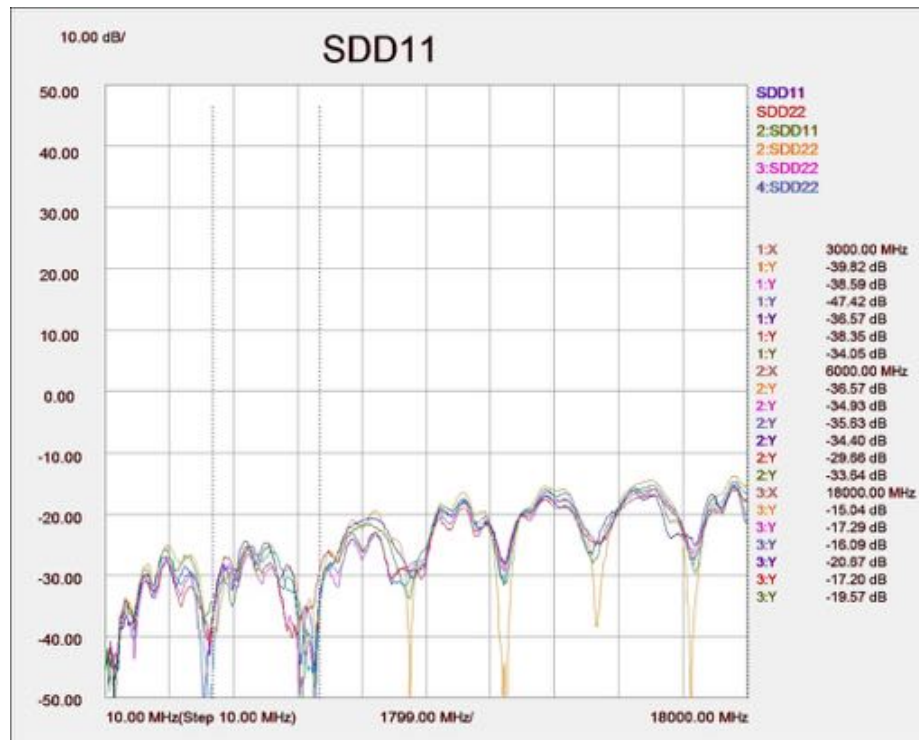


Figure 20. Typical receptacle TPA balanced return loss, differential termination replacing Mini-SAS HD connector

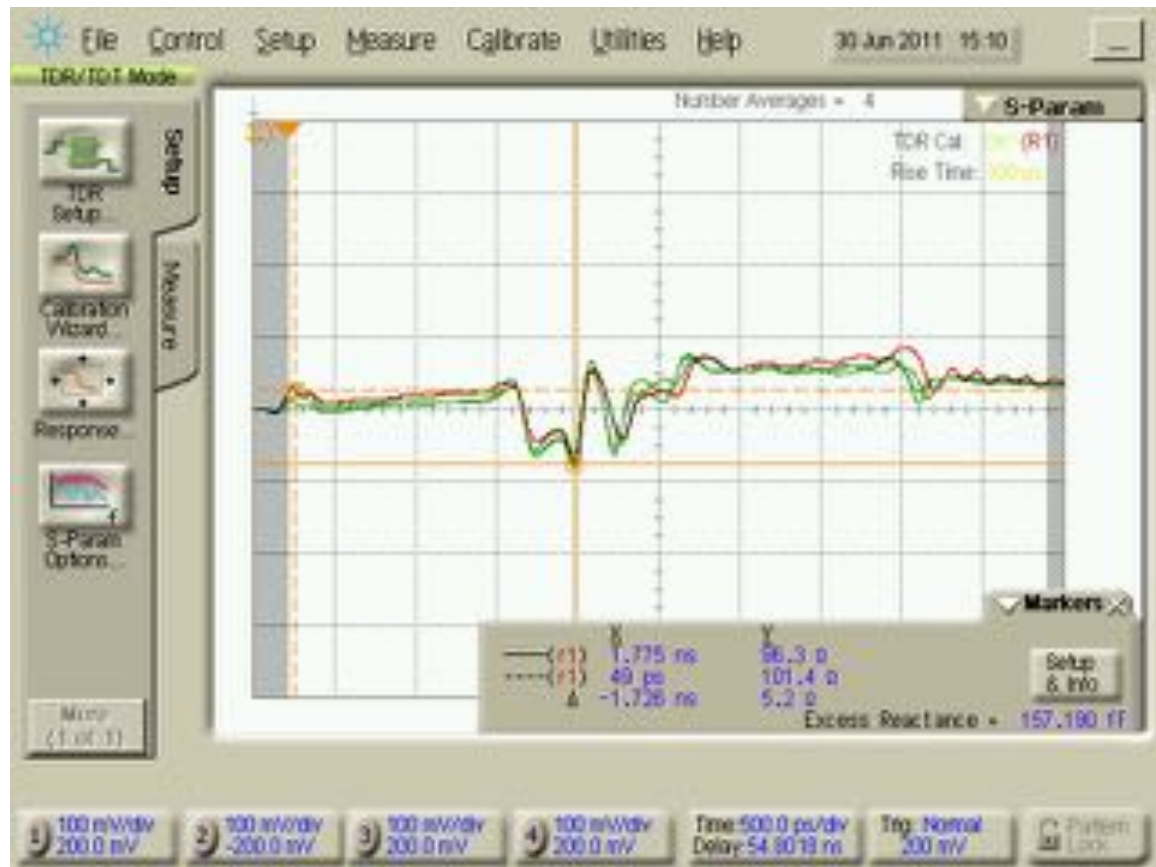


Figure 21. Typical differential TDP of TPA-P connected to TPA-R at 100 ps Rise Time, All differential pairs. (Equivalent to 70ps, 20% to 80%.)

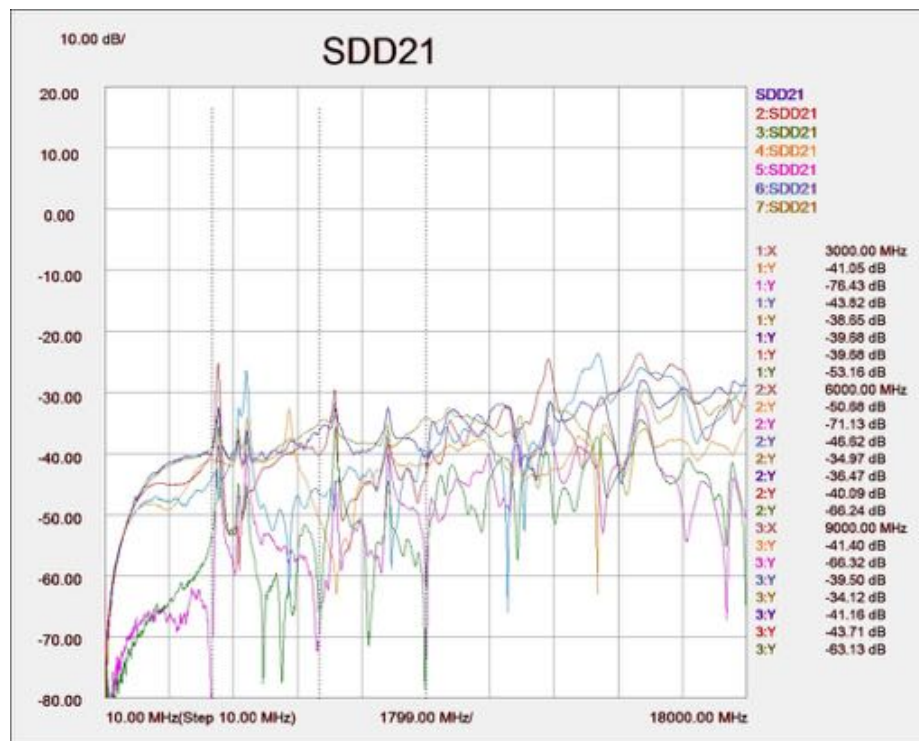
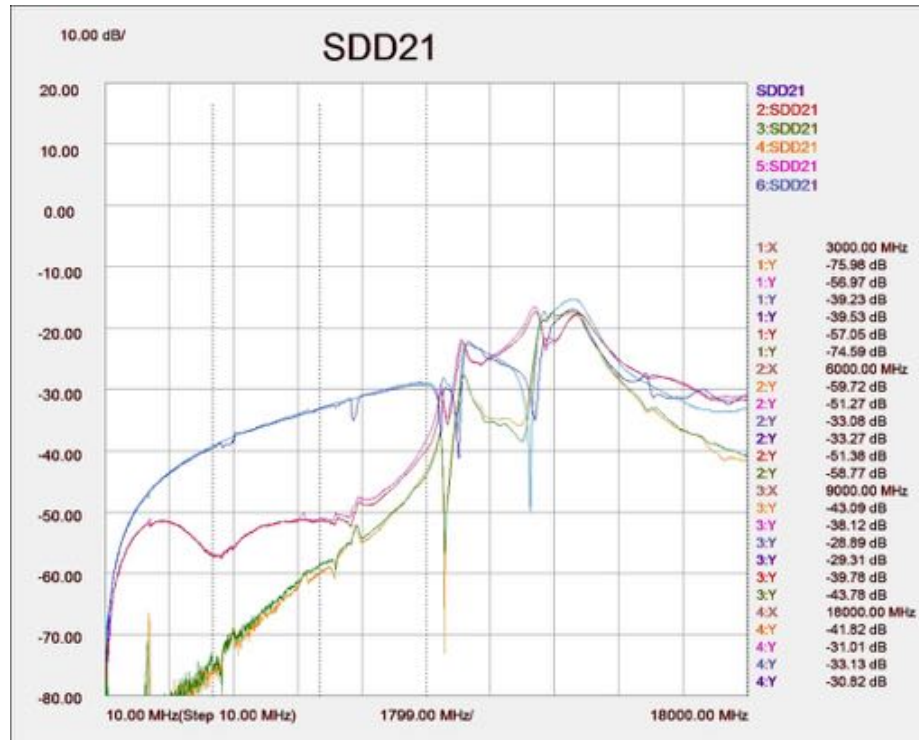


Figure 22. Typical Differential NEXT for plug, without connector (top) and with mated connectors (bottom), adjacent differential pairs, all differential pairs terminated at both ends

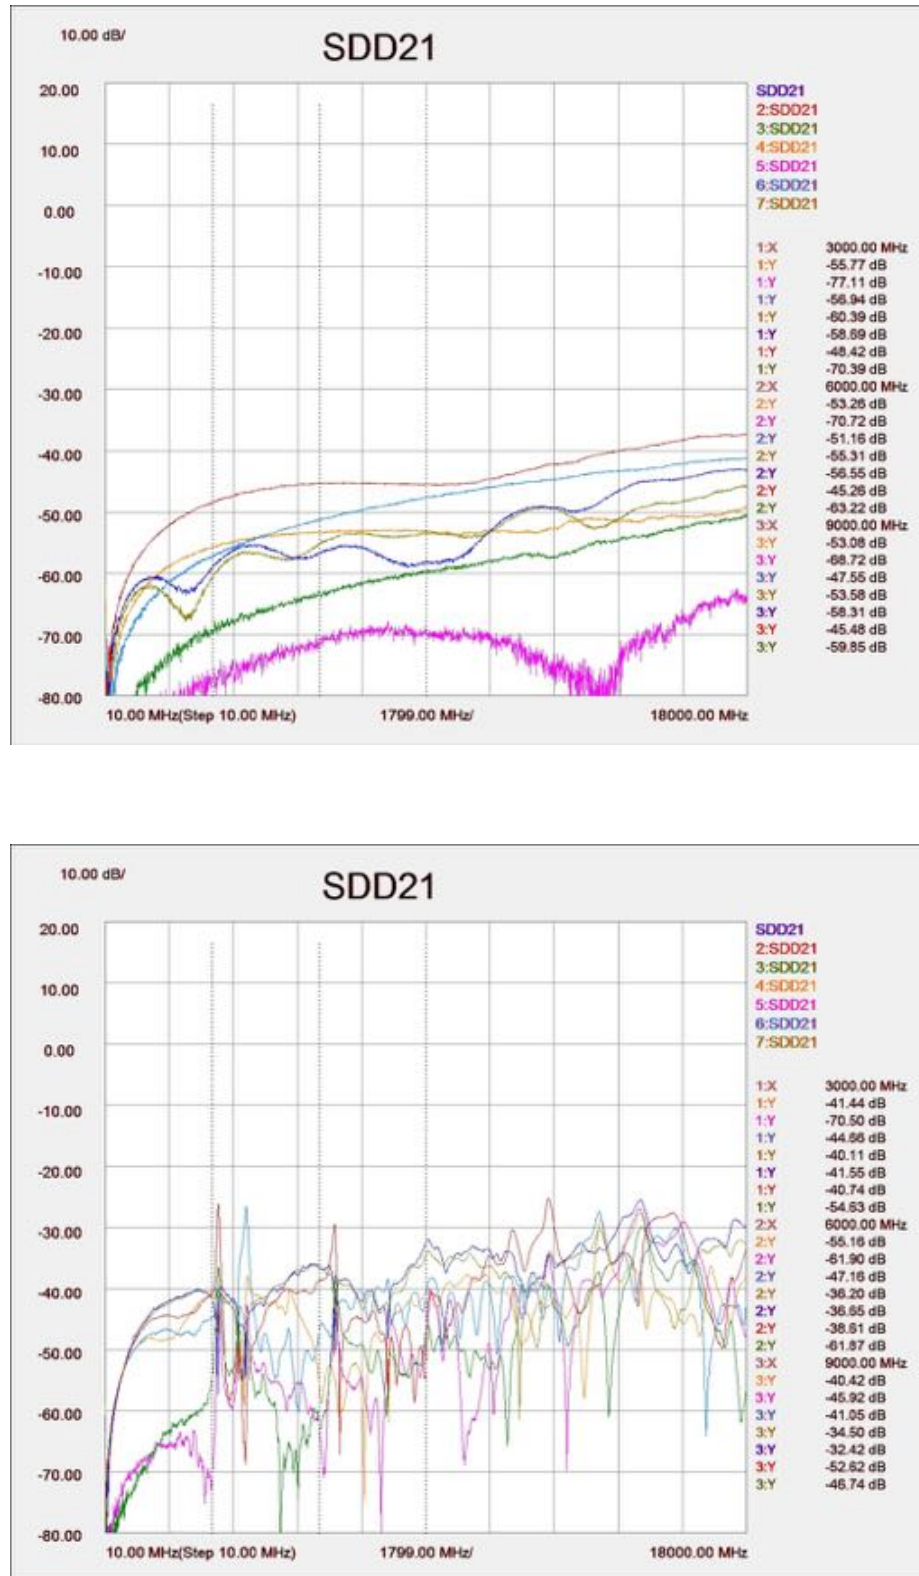


Figure 23. Typical Differential NEXT for receptacle, without connector (top) and with mated connectors (bottom), adjacent differential pairs, all differential pairs terminated at both ends

Wilder Technologies, LLC – Limited Warranty

Wilder Technologies, LLC warrants that each Test Adapter, 1) is free from defects in materials and workmanship and, 2) conforms to Wilder Technologies specifications for a period of 12 months. **See Consumable and Fragile Material Warranty for exceptions to the 12 month warranty**

The warranty period for a Test Adapter is a specified, fixed period commencing on the date of ship from Wilder Technologies, LLC. If you did not purchase your Test Adapter directly from Wilder Technologies, LLC, the serial number and a valid proof of purchase will be required to establish your purchase date. If you do not have a valid proof of purchase, the warranty period will be measured from the date of ship from Wilder Technologies, LLC.

If, during the warranty period, the Test Adapter is not in good working order, Wilder Technologies, LLC will, at its option, repair or replace it at no additional charge, except as is set forth below. In some cases, the replacement Test Adapter may not be new and may have been previously installed. Regardless of the Test Adapter's production status, Wilder Technologies, LLC appropriate warranty terms apply.

Consumable and Fragile Material Warranty

Wilder Technologies, LLC warrants that consumable materials and all fragile materials supplied by Wilder Technologies, LLC either as part of an instrument or system, or supplied separately, will be free from defects in material and workmanship at the time of shipment.

Extent of Warranty

The warranty does not cover the repair or exchange of a Test Adapter resulting from misuse, accident, modification, unsuitable physical or operating environment, improper maintenance by you, or failure caused by a product for which Wilder Technologies, LLC is not responsible. The warranty is voided by removal or alteration of Test Adapter or parts identification labels. The initial three months are unconditional; the remaining months excludes plugs, receptacles and SMA connectors. Connectors are wear items and excluded from the warranty after the initial three months.

These warranties are your exclusive warranties and replace all other warranties or conditions, express or implied, including but not limited to, the implied warranties or conditions or merchantability and fitness for a particular purpose. These warranties give you specific legal rights and you may also have other rights which vary from jurisdiction to jurisdiction. Some jurisdictions do not allow the exclusion or limitation of express or implied warranties, so the above exclusion or limitation may not apply to you. In that event, such warranties are limited in duration to the warranty period. No warranties apply after that period.

Items Not Covered by Warranty

Wilder Technologies, LLC does not warrant uninterrupted or error-free operation of a Test Adapter.

Any technical or other support provided for a Test Adapter under warranty, such as assistance via telephone with "how-to" questions and those regarding Test Adapter set-up and installation, will be provided **WITHOUT WARRANTIES OF ANY KIND**.

Warranty Service

Warranty service may be obtained from Wilder Technologies, LLC by returning a Wilder Technologies, LLC Returns Material Authorization and the Test Adapter to Wilder Technologies, LLC during the warranty period. To obtain RMA number, contact support@wilder-tech.com.

You may be required to present proof of purchase or other similar proof of warranty entitlement. You are responsible for any associated transportation charges, duties and insurance between you and Wilder Technologies, LLC. In all instances, you must ship Test Adapters in Wilder Technologies, LLC approved packaging. Information on packaging guidelines can be found at: www.wilder-tech.com. Wilder Technologies, LLC will ship repaired or replacement Test Adapter Delivery Duty Prepaid (DDP) and will pay for return shipment. You will receive title to the repaired or replacement Test Adapter and you will be the importer of record.

Wilder Technologies, LLC – Terms & Conditions of Sale

1. **Other Documents:** This Agreement may NOT be altered, supplemented, or amended by the use of any other document(s) unless otherwise agreed to in a written agreement signed by both you and Wilder Technologies, LLC. If you do not receive an invoice or acknowledgement in the mail, via e-mail, or with your Product, information about your purchase may be obtained at support@wilder-tech.com or by contacting your sales representative.
2. **Payment Terms, Orders, Quotes, Interest:** Terms of payment are within Wilder Technologies, LLC's sole discretion, and unless otherwise agreed to by Wilder Technologies, LLC, payment must be received by Wilder Technologies, LLC prior to Wilder Technologies, LLC's acceptance of an order. Payment for the products will be made by credit card, wire transfer, or some other prearranged payment method unless credit terms have been agreed to by Wilder Technologies, LLC. Invoices are due and payable within the time period noted on your invoice, measured from the date of the invoice. Wilder Technologies, LLC may invoice parts of an order separately. Your order is subject to cancellation by Wilder Technologies, LLC, in Wilder Technologies, LLC's sole discretion. Unless you and Wilder Technologies, LLC have agreed to a different discount, Wilder Technologies, LLC's standard pricing policy for Wilder Technologies, LLC-branded systems, which includes hardware, software and services in one discounted price, allocates the discount off list price applicable to the service portion of the system to be equal to the overall calculated percentage discount off list price on the entire system. Wilder Technologies, LLC is not responsible for pricing, typographical, or other errors in any offer by Wilder Technologies, LLC and reserves the right to cancel any orders resulting from such errors.
3. **Shipping Charges; Taxes; Title; Risk of Loss:** Shipping, handling, duties and tariffs are additional unless otherwise expressly indicated at the time of sale. Title to products passes from Wilder Technologies, LLC to Customer on shipment from Wilder Technologies, LLC's facility. Loss or damage that occurs during shipping by a carrier selected by Wilder Technologies, LLC is Wilder Technologies, LLC's responsibility. Loss or damage that occurs during shipping by a carrier selected by you is your responsibility. You must notify Wilder Technologies, LLC within 7 days of the date of your invoice or acknowledgement if you believe any part of your purchase is missing, wrong or damaged. Unless you provide Wilder Technologies, LLC with a valid and correct tax exemption certificate applicable to your purchase of Product and the Product ship-to location, you are responsible for sales and other taxes associated with the order. **Shipping dates are estimates only.**
4. **WARRANTY:** WILDER TECHNOLOGIES, LLC, warrants that the item(s) manufactured under the Buyer's contract shall be free from defects in materials and workmanship furnished by WILDER TECHNOLOGIES, LLC, and shall conform to the applicable drawings and specifications. WILDER TECHNOLOGIES, LLC'S liability herein, for breach of warranty, contract or negligence in manufacturing, shall be limited to repair or replacement. Repair or replacement of defective items will be applicable only if the Buyer notifies WILDER TECHNOLOGIES, LLC, by written notice within 30-days of delivery. All claims shall be addressed to: support@wilder-tech.com or WILDER TECHNOLOGIES, LLC, 6101A East 18th Street, Vancouver, Washington 98661 U.S.A.; ATTENTION: Customer Service Manager. WILDER TECHNOLOGIES, LLC, reserves the right to inspect at the Buyer's plant all items claimed to be defective or nonconforming prior to authorizing their return. WILDER TECHNOLOGIES, LLC, assumes no liability for the results of the use of its components in conjunction with other electric, electronic or mechanical components, circuits and/or systems. The foregoing constitutes the sole and exclusive remedy of the Buyer and the exclusive liability of WILDER TECHNOLOGIES, LLC, and is IN LIEU OF ANY AND ALL OTHER WARRANTIES, STATUTORY, IMPLIED OR EXPRESSED AS TO MERCHANTABILITY, FITNESS FOR THE PURPOSE SOLD, DESCRIPTION, QUALITY, and PRODUCTIVENESS OR ANY OTHER MATTER. Without limiting the foregoing, in no event shall WILDER TECHNOLOGIES, LLC, be liable for loss of use, profit or other collateral, or for special and/or consequential damages.
5. **RETURNED GOODS:** WILDER TECHNOLOGIES, LLC, will accept only those goods for return that have been authorized for return. All goods authorized for return shall be assigned a Returned Material Authorization (RMA) Number. The RMA Number shall be clearly marked on the shipping container(s) and all documentation accompanying the goods authorized for return. The RMA Number shall be assigned by WILDER TECHNOLOGIES, LLC pursuant to the conditions set forth in Paragraph 4, WARRANTY.
6. **UNITED STATES GOVERNMENT CONTRACTS:** In the event this offer is accepted under Government contract, WILDER TECHNOLOGIES, LLC, agrees to accept clauses required by Government regulations and to waive WILDER TECHNOLOGIES, LLC conditions inconsistent therewith. WILDER TECHNOLOGIES, LLC, certifies that it is a regular manufacturer or dealer of the goods and/or services offered herein and that the prices offered do not exceed those charged to any customer for like quantities, services or materials under the same conditions.

Compliance with Environmental Legislation

Wilder Technologies, LLC, is dedicated to complying with the requirements of all applicable environmental legislation and regulations, including appropriate recycling and/or disposal of our products.



WEEE Compliance Statement

The European Union adopted Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), with requirements that went into effect August 13, 2005. WEEE is intended to reduce the disposal of waste from electrical and electronic equipment by establishing guidelines for prevention, reuse, recycling and recovery.

Wilder Technologies has practices and processes in place to conform to the requirements in this important Directive.

In support of our environmental goals, effective January 1st, 2009 Wilder Technologies, LLC has partnered with EG Metals Inc. – Metal and Electronics Recycling of Hillsboro, Oregon, www.egmetalrecycling.com, to recycle our obsolete and electronic waste in accordance with the European Union Directive 2002/96/EC on waste electrical and electronic equipment ("WEEE Directive").

As a service to our customers, Wilder Technologies is also available for managing the proper recycling and/or disposal of all Wilder Technologies products that have reached the end of their useful life. For further information and return instructions, contact support@wilder-tech.com.

Glossary of Terms

TERMINOLOGY	DEFINITION
Aggressor	A signal imposed on a system (i.e., cable assembly) to measure response on other signal carriers.
Decibel (dB)	Ten times the common logarithm (i.e. log10) of the ratio of relative powers.
Informative	The designation of a test that is not required for compliance but is considered important from a characterization standpoint. It is provided for informational purposes only.
Insertion loss	The ratio, expressed in dB, of incident power to delivered power.
Internal cable	A cable that is used to connect a SAS Initiator Device to a SAS Target Device within a mainframe.
Near-end crosstalk	Crosstalk that is propagated in a disturbed channel in the opposite direction as the propagation of a signal in the aggressor channel. The terminals of the aggressor channel and the victim channel are usually close to each other.
Normative	The designation of a test that is required for compliance.
Physical link	Two differential signal pairs, one pair in each direction, that connect two physical phys.
Return Loss	The ratio, expressed in dB, of incident power to reflected power.
SAS Initiator Device	A device containing SSP, STP, and /or SMP initiating ports in a SAS domain.
SAS Target Device	A device containing SSP, STP, and /or SMP target ports in a SAS domain.
MSASHD-TPA	Mini-SAS HD Test Point Access. A specialized assembly that interfaces to a Mini-SAS HD receptacle or plug and enables access of signals for measurement or stimulation.
Serial ATA (SATA)	The protocol defined by SATA (see ATA8-AAM)
Serial Attached SCSI (SAS)	The set of protocols defined in SPL and the interconnect defined by the SAS standard.
Victim	A signal carrier on a system that has a response imposed on it by other signals in the system.

Index

- 1X-THRU, 17
- 8-Position Low-Speed Connector, 3, 18, 19
- Cable Bend Limits, 7
- Cable Losses, 17
- Cable Tension (Pull Forces), 7
- Cable Twisting (Torque), 7
- Calibration, 15
- Care and Handling, 7
- Cleaning, 9
- Compliance
 - WEEE, 40
- Connections
 - MSASHD-TPA to DUT, 7
 - SMA, 8
- Crosstalk Errors, 16
- De-Emphasis, 17
- Directivity Errors, 16
- Drift Errors, 16
- DUT, 16
- Electrical Specifications, 23
- Electrostatic Discharge Information (ESD), 10
- Environmental Changes, 16
- Errors
 - Crosstalk*, 16
 - Directivity*, 16
 - Drift*, 16
 - Load Impedance Mismatching*, 16
 - Random*, 16
 - Receiver Reflection-tracking in Test Equipment*, 16
 - Receiver Transmission in Test Equipment*, 16
 - Source Impedance Mismatching*, 16
- ESD Protection, 10
- Figures
 - Cable Connectors, 18, 19
 - Calibration Module, 15
 - The Mini-SAS HD Test Adapter (Left-Hand Plug), 4
 - The Mini-SAS HD Test Adapter (Receptacle), 5
 - The Mini-SAS HD Test Adapter (Right-Hand Plug), 3
- Glossary, 41
- Group Delay, 17
- Handling and Storage, 9
- Load Impedance Mismatching Errors, 16
- Low-Speed Connector, 5
- Low-Speed Connector Part Numbers, 5
- Making Connections, 9
- Mechanical and Environmental Specifications, 18
- Mini-SAS HD Plug TPA Testing a Mini-SAS HD Device, 11
- Mini-SAS HD Receptacle TPA and Cable Testing a Mini-SAS HD Device, 13
- Mini-SAS HD Receptacle TPA Testing a Mini-SAS HD Device, 12
- Mini-SAS HD Receptacle TPAs Testing a Mini-SAS HD Cable, 14
- Molex Part Numbers, 5
- MSASHD-TPA-P Cable Pinout, 19
- MSASHD-TPA-R Cable Pinout, 18
- Pre-Emphasis, 17
- Product Inspection, 6
- Product Return, 6
- Pull Force, 7, 8
- Random Errors, 16
- Receiver Reflection-Tracking in Test Equip. Errors, 16
- Receiver Transmission in Test Equipment Errors, 16
- SAS Specification, 3
- SAS Specification 3.0, 11
- Secure Storage, 6
- SMA Cables, 18, 19
- SOLT, 16
- Source Impedance Mismatching Errors, 16
- Support, 39
- Supporting Instrument Cables or Accessories, 8
- Tables
 - Electrical Specifications, 23
 - General Specifications, 18
 - Mini-SAS HD Plug Pin Assignments, 21, 22
 - Mini-SAS HD Receptacle Pin Assignments, 21, 22
 - MSASHD-TPA 8-Position Low-Speed Connector, 20
 - SMA Cable Connectors (High-Speed), 20
- Terms and Conditions of Sale, 39
- Test Instrument Noise, 16
- Test Repeatability Problems, 16
- User Model Examples, 11, 13, 14
- Verify Plug TPA Orientation, 8
- Visual Inspection, 9
- Warranty, 38
- Web Sites
 - support@wilder-tech.com, 38, 39
 - www.egmetalrecycling.com, 40
 - www.wilder-tech.com, 38
- WEEE, 40

Visit our website at www.wilder-tech.com



Wilder Technologies, LLC
6101A East 18th Street
Vancouver, WA 98661
Phone: 360-859-3041
Fax: 360-859-3105
www.wilder-tech.com